



POS.	CODE	DESCRIPTION	QTY
1	A01629	BEARING COVER	1
2	A01630	SCREW ST5X72	4
3	A01631	PARALLEL KEY	1
4	A01632	SPINDLE	1
5-10 (SET1)	A01633	GEAR SWITCH ASSEMBLY	1
11	A01634	BEARINGS 698	1
12	A01635	COUNTER SHAFT	1
13	A01636	KEY	1
14	A01637	MOTOR GEAR	1
15	A01638	SAFETY RING	1
16	A01639	BEARING	1
17	A01640	BEARING	1
18	A01641	SAFETY RING	1
19	A01642	SAFETY RING	1
20	A01643	SPINDLE DOUBLE GEAR	1
21	A01644	BEARING	1
22	A01645	LOCATING PIN	2
23	A01646	GEAR BOX	1
24	A01647	SEAL RING	1
25	A01648	BEARING	1
26	A01649	ROTOR	1
27	A01651	BEARING	1
28	A01652	BEARING COVER	1
29-32 (SET2)	A01653	COULISSE ASSEMBLY	1
33	40753	CABLE	1
34	A01657	SCREW	12

POS.	CODE	DESCRIPTION	QTY
35+37 (SET3)	A01659	HANDLE ASSEMBLY	1
36	A01660	SPEED ADJUSTER	1
38	A01662	SWITCH	1
39	A01663	CABLE SLEEVE	1
40	A01664	SCREW	2
41	A01665	CABLE PLATE	1
42+45 (SET4)	A01668	STATOR	1
43	A01666	CAPACITANCE	1
44	A01667	SCREW	2
46	A01670	LABEL	1
47	A01671	MOTOR COVER	1
48	A01672	LABEL	1
49	A01673	CARBON BRUSH	1
50	A01674	BRUSH HOLDER	2
51	A01675	BRUSH HOLDER COVER	2
52	A01676	SCREW	2
53	A01677	SOFT START	1
54	A01679	REAR COVER	1
55	A01680	SCREW	4
56	A01681	SPANNER	1
57		MIXING PADDLE	1
58	A01682	SCREW	1
59	A01683	SELF-LOCKING DUST JACKET	1
60	A01684	SWITCH DUST JACKET	1
61	46602	OIL SEAL	1