



POS.	CODE	DESCRIPTION	QTY
1	A00003	FRONT COVER	1
2	A00004	CIRCLIP 28	1
3	A00005	SLIDER WASHER	1
4	A00006	RESET COVER	1
5	A00007	SLIDER	1
6	A00008	SPRING	1
7	A00009	WASHER	1
8	A00010	CYLINDER CASE	1
9	A00011	SCREW	4
10	A00012	OIL SEAL	1
12	A00013	GUARD RING SLEEVE	1
13	A00014	STEEL BALL POLE	2
15	A00015	SECOND STRIKER	1
16	A00016	O-RING	2
18	A00017	BUFFER SPACER	1
19	A00018	BUFFER CIRCLE	1
20	A00019	BUFFER WASHER	1
22	A00020	RAM	1
23	A00021	O-RING	2
30	A00022	CYLINDER	1
31	A00023	ANTI-FRICTION SPACER	2
32	A00024	OIL BEARING	1
33	A00025	SPLINE HOUSING	1
34	A00026	CLUTCH	1
35	A00027	BIG BEVEL GEAR	1
36	A00028	O-RING	3
37	A00029	PISTON PIN	1

POS.	CODE	DESCRIPTION	QTY
38	A00030	PISTON	1
39	A00031	CONNECTING ROD	1
40	A00032	NEEDLE BEARING	1
41	A00033	SCREW	6
42	A00034	TRANSMISSION CASE COVER	1
43	A00035	SHIFTING FORK	1
44	A00036	TORSIONAL SPRING	1
45	A00037	CRANKSHAFT CLAMP	1
46	A00038	SCREW	2
47	A00039	SEALING STRIP	1
48	A00040	SMALL BEVEL GEAR	1
49	A00041	WASHER	1
50	A00042	NEEDLE BEARING	2
51	A00043	O-RING	1
52	A00044	SECOND GEAR	1
53	A00045	CORE	1
54	A00046	TRIPPING SPRING	8
55	A00047	STEEL BALL POLE	8
56	A00048	WASHER	2
58	A00049	CRANKSHAFT	1
59	A00050	WASHER	1
60	A00051	AXIS PIN	1
61	A00052	TRANSMISSION CASE	1
62	A00053	LINK BLOCK	1
63	A00054	MIDDLE COVER	1
64	A00055	NOB	1

POS.	CODE	DESCRIPTION	QTY
65	A00056	STEEL BALL	2
66	A00057	NOB SPRING	1
67	A00058	PUSH PLATE	1
68	A00059	LOCKING PLATE	1
69	A00060	SCREW	1
70	A00061	SEAL RING	1
71	A00062	CIRCLIP	1
72	A00063	BEARING	1
73	A00064	O-RING	1
74	A00065	ROTOR	1
75	A00066	SELF TAPPING SCREW	2
76	A00067	AIR GUIDER	1
77	A00068	STATOR	1
78	A00069	MOTOR HOUSING	1
79	A00070	SCREW	4
80	A00071	INSERT PLATE	1
81	A00072	SELF TAPPING SCREW	1
82	A00073	FUNCTION BOARD	1
83	A00074	SELF TAPPING SCREW	9
84	A00075	SELF TAPPING SCREW	2
85	A00076	NEON LAMP COVER	1
86	A00077	RESET SPRING	1
87	A00078	LOCKING PIN	1
88	A00079	SELF TAPPING SCREW	3
89	A00080	BEARING CAP	1
90	A00081	SERRATED NUT	1
91	A00082	BEARING	1

POS.	CODE	DESCRIPTION	QTY
92	A00083	BEARING COVER	1
93	A00084	BRUSH HOLDING SET	1
94	A00085	BOTTOM COVER	1
95	A00086	BOTTOM COVER SCREW	1
96	A00087	HANDLE	1
97	A00088	TRIGGER	1
98	A00089	SWITCH SEAT	1
99	A00090	SWITCH	1
100	A00091	CORD CLAMP	1
101	A00092	SELF TAPPING SCREW	2
102	A00093	INDUCTANCE	1
103	A00094	HANDLE CAP	1
104	A00095	SHEATH	1
105	A00096	DEPTH GAUGE	1
106	A00097 (UNTIL 7.2020)	COLLAR	1
	A12210 (SINCE 7.2020)		
108	A00098 (UNTIL 7.2020)	BOLT	1
	A02952 (SINCE 7.2020)		
109	A00099 (UNTIL 7.2020)	HANDLE CLAMP	1
	A12209 (SINCE 7.2020)		
110	A00100	V-SPRING	1
111	A00101	DEPTH GAUGE CLAMP	1

POS.	CODE	DESCRIPTION	QTY	
112	A00102	AUXILIARY HANDLE	1	
113	A00103	CARBON BRUSHES SET	1	
114	A00104	ANTI-FRICTION SPACER	2	
115	A00105	CORD	1	
116	A00106	ECCENTRIC BLOCK	1	
117	A00107	O-RING	1	
119	A00108	ISOLATION BLOCK	1	
120	A00109	PIN	1	
121	A00110	FELT PLUG	1	
122	A00111	CIRCLIP	1	
123	A00112	SLEEVE	1	
124	A00113	WASHER	2	
125	A00114	BUFFER CIRCLE	1	
126	A00115	LOCATION PIN	3	
127	A00116	OIL BEARING	1	
128	A00117	RUBBER NAIL	2	
	SET 1 (129+131)	A00118	NEEDLE BEARING	2
130	A00119	THRUST BEARING	1	
132	A10760	PIN 3X3X8	1	
133	A10709	CIRCLIP	1	